

**Palm® Wireless Keyboard  
with Bluetooth® wireless technology  
(3245WW)**

**Disassembly Instructions**

**Only authorized recyclers are permitted to use these disassembly instructions. Any attempted disassembly by a user or unauthorized party will void the product warranty and may irreparably damage the product.**

1

## Required Tools



- (1) A cross screw driver with 2mm diameter for fastening and unfastening screws**
- (2) A plastic bar for removing parts without damages(optional)**

## The Keyboard



## Remove the easel by hand



**Only authorized recyclers are permitted to use these disassembly instructions. Any attempted disassembly by a user or unauthorized party will void the product warranty and may irreparably damage the product.**

Unfasten these two screws on the left strip panel



The left strip panel is disassembled



**Only authorized recyclers are permitted to use these disassembly instructions. Any attempted disassembly by a user or unauthorized party will void the product warranty and may irreparably damage the product.**

### Take the rubber dome



### Take the battery cover




**Only authorized recyclers are permitted to use these disassembly instructions. Any attempted disassembly by a user or unauthorized party will void the product warranty and may irreparably damage the product.**

**Unfasten these two screw on the right strip panel**



**Remove the strip panel by releasing the snap hook**

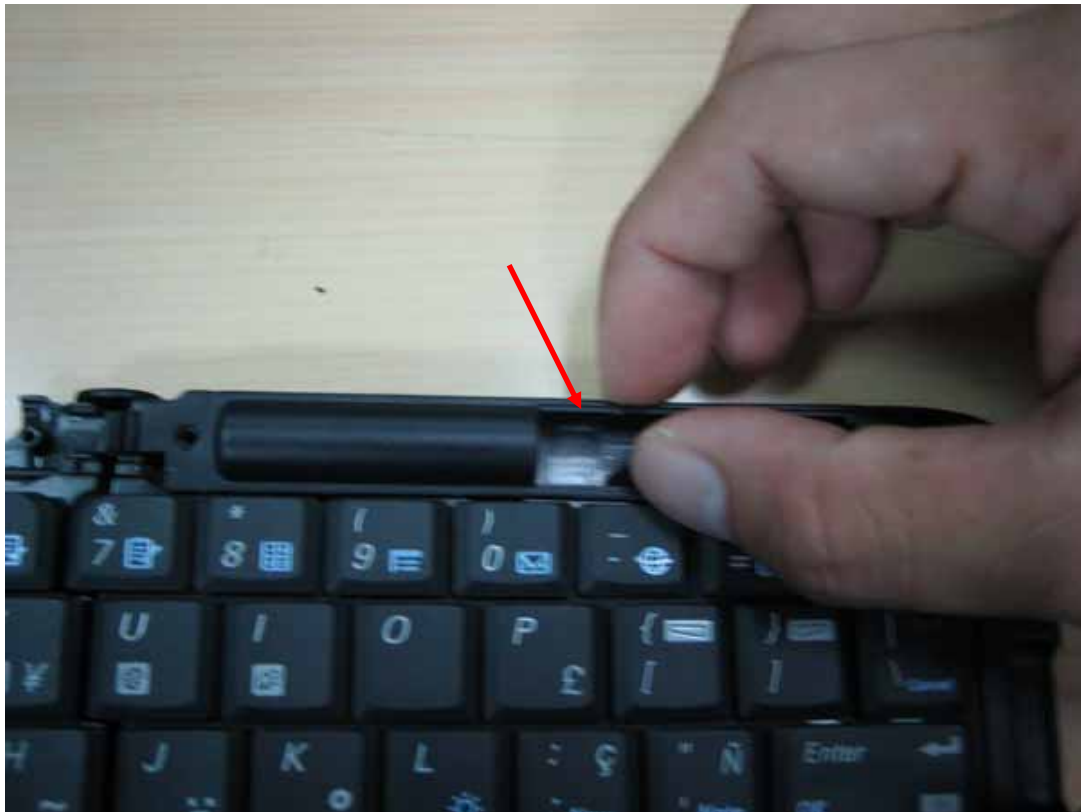

**Only authorized recyclers are permitted to use these disassembly instructions. Any attempted disassembly by a user or unauthorized party will void the product warranty and may irreparably damage the product.**



The right strip panel is disassembled



Take the rubber cover of DC Jack



**Only authorized recyclers are permitted to use these disassembly instructions. Any attempted disassembly by a user or unauthorized party will void the product warranty and may irreparably damage the product.**

## Remove the upper hinge



## Take the left key module



**Only authorized recyclers are permitted to use these disassembly instructions. Any attempted disassembly by a user or unauthorized party will void the product warranty and may irreparably damage the product.**



**Note, this switch is attached by double adhesive tape**



**Take the lower hinge**




**Only authorized recyclers are permitted to use these disassembly instructions. Any attempted disassembly by a user or unauthorized party will void the product warranty and may irreparably damage the product.**

## Take the right key module



## Take the membrane tail by releasing connectors

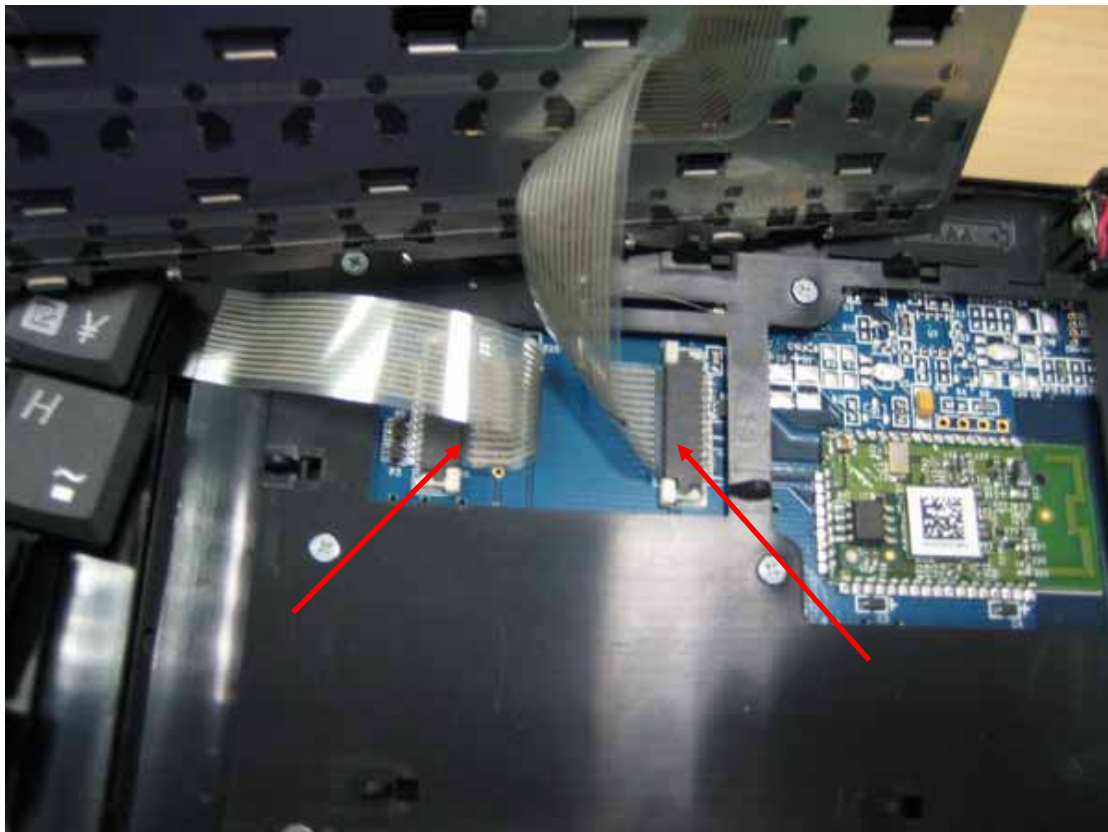


**Only authorized recyclers are permitted to use these disassembly instructions. Any attempted disassembly by a user or unauthorized party will void the product warranty and may irreparably damage the product.**

## The key module is disassembled



## Unfasten the 9 screws on the left case

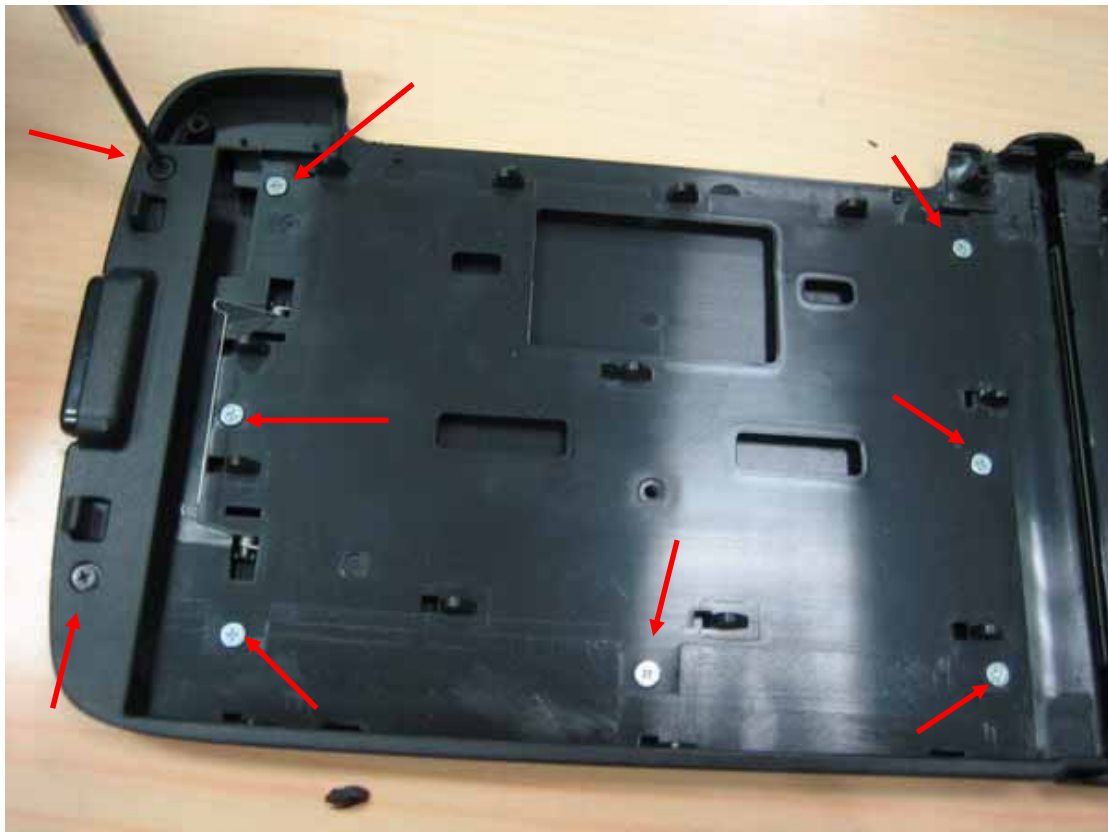

**Only authorized recyclers are permitted to use these disassembly instructions. Any attempted disassembly by a user or unauthorized party will void the product warranty and may irreparably damage the product.**



Take left case and the spring and two rubber feet



Unfasten the two screws on the button



Only authorized recyclers are permitted to use these disassembly instructions. Any attempted disassembly by a user or unauthorized party will void the product warranty and may irreparably damage the product.

## Disassemble the button



## Unfasten the 11 screws on the right case



**Only authorized recyclers are permitted to use these disassembly instructions. Any attempted disassembly by a user or unauthorized party will void the product warranty and may irreparably damage the product.**

Take right case and spring and two rubber feet



Take the PCBA



**Only authorized recyclers are permitted to use these disassembly instructions. Any attempted disassembly by a user or unauthorized party will void the product warranty and may irreparably damage the product.**



## Disassemble the middle hinge




## Take the rubber feet and mylar




**Only authorized recyclers are permitted to use these disassembly instructions. Any attempted disassembly by a user or unauthorized party will void the product warranty and may irreparably damage the product.**

## Remove the link bar

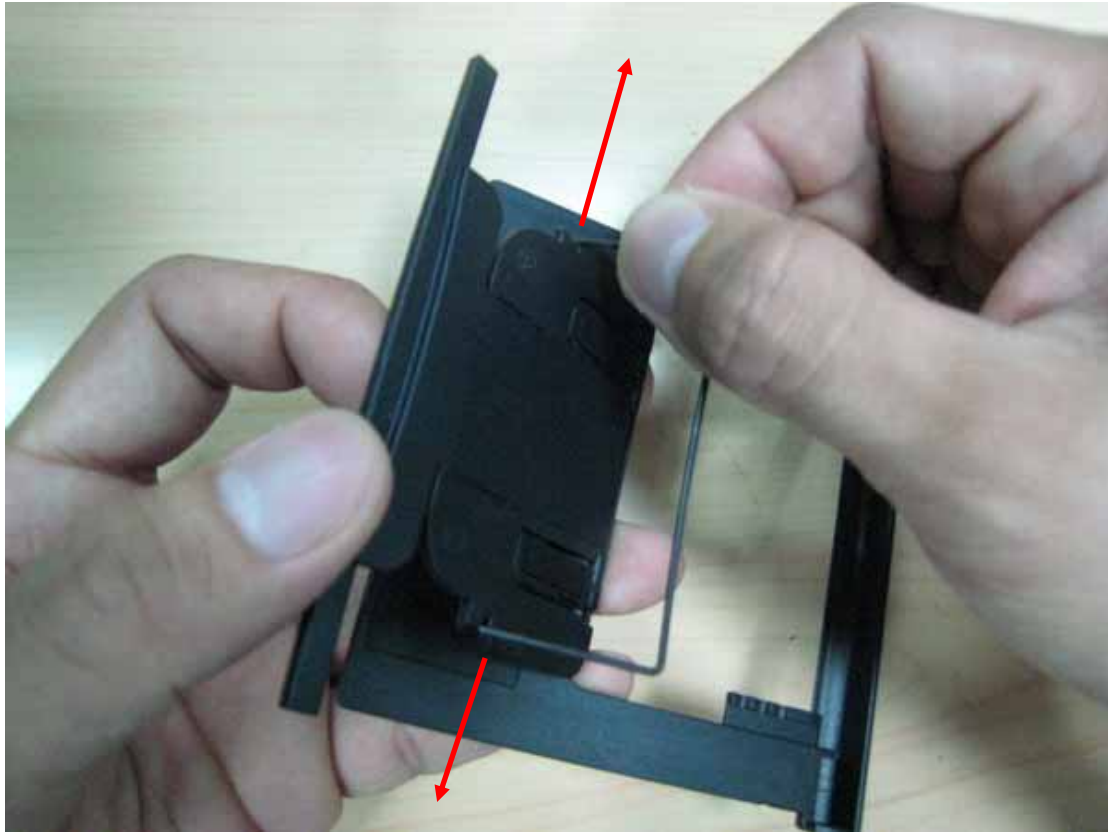

## Remove the upper holder

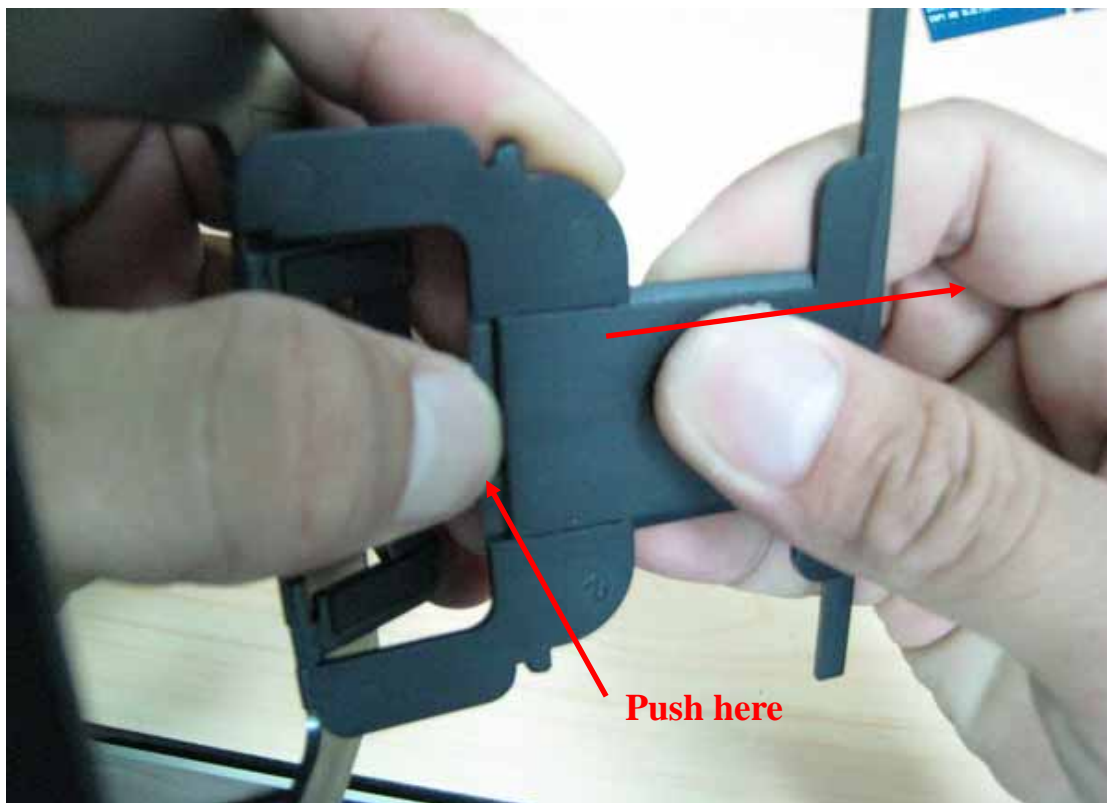

**Only authorized recyclers are permitted to use these disassembly instructions. Any attempted disassembly by a user or unauthorized party will void the product warranty and may irreparably damage the product.**

## Holder is disassembled



## Release the shaft



**Only authorized recyclers are permitted to use these disassembly instructions. Any attempted disassembly by a user or unauthorized party will void the product warranty and may irreparably damage the product.**

## Easel is disassembled



## Take the rubber feet




**Only authorized recyclers are permitted to use these disassembly instructions. Any attempted disassembly by a user or unauthorized party will void the product warranty and may irreparably damage the product.**

**Take the rubber foot and mylar**



**Take the mylar**

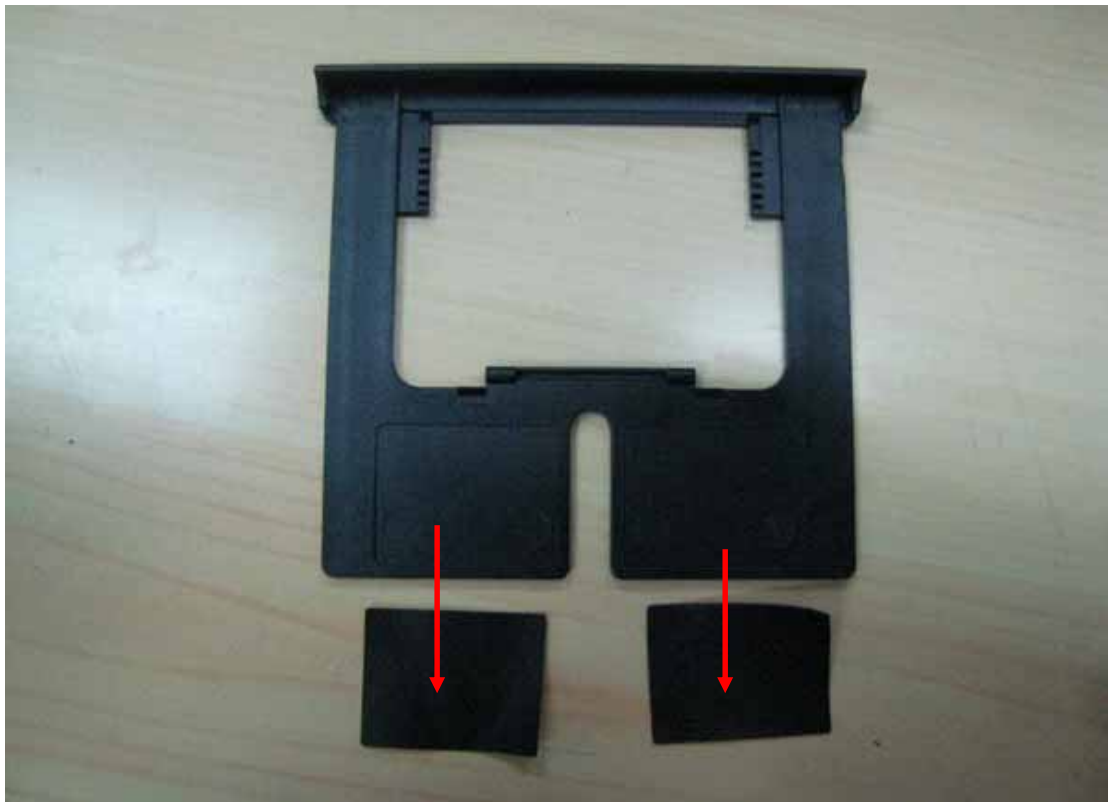

**Only authorized recyclers are permitted to use these disassembly instructions. Any attempted disassembly by a user or unauthorized party will void the product warranty and may irreparably damage the product.**



**Take the lock from left strip panel**



**Remove the lock pin**



**Only authorized recyclers are permitted to use these disassembly instructions. Any attempted disassembly by a user or unauthorized party will void the product warranty and may irreparably damage the product.**



**Remove the transparent mylar on the back of key module**



**Take the key cap**



**Only authorized recyclers are permitted to use these disassembly instructions. Any attempted disassembly by a user or unauthorized party will void the product warranty and may irreparably damage the product.**

## Key cap is disassembled (with link bar)




## All key caps are removed



**Only authorized recyclers are permitted to use these disassembly instructions. Any attempted disassembly by a user or unauthorized party will void the product warranty and may irreparably damage the product.**

**Remove the plunger by push it through the hole, shown as the arrow**

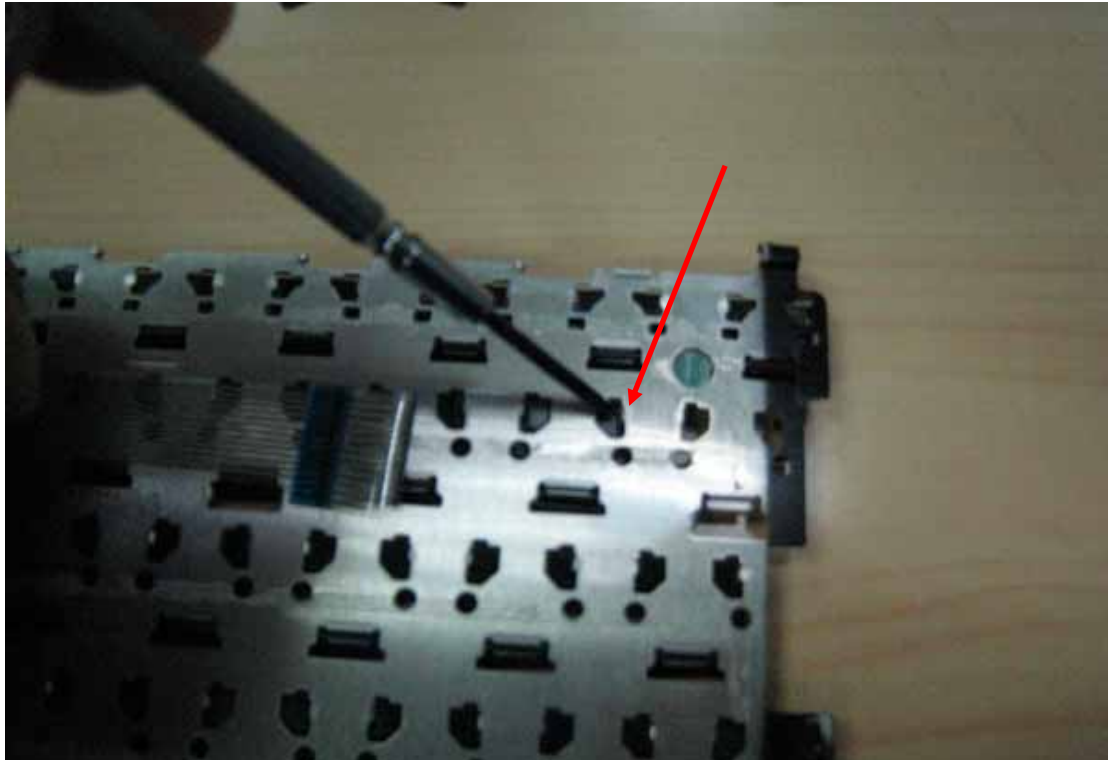

**All plungers are removed**




**Only authorized recyclers are permitted to use these disassembly instructions. Any attempted disassembly by a user or unauthorized party will void the product warranty and may irreparably damage the product.**



Take the rubber sheet



Take the membrane

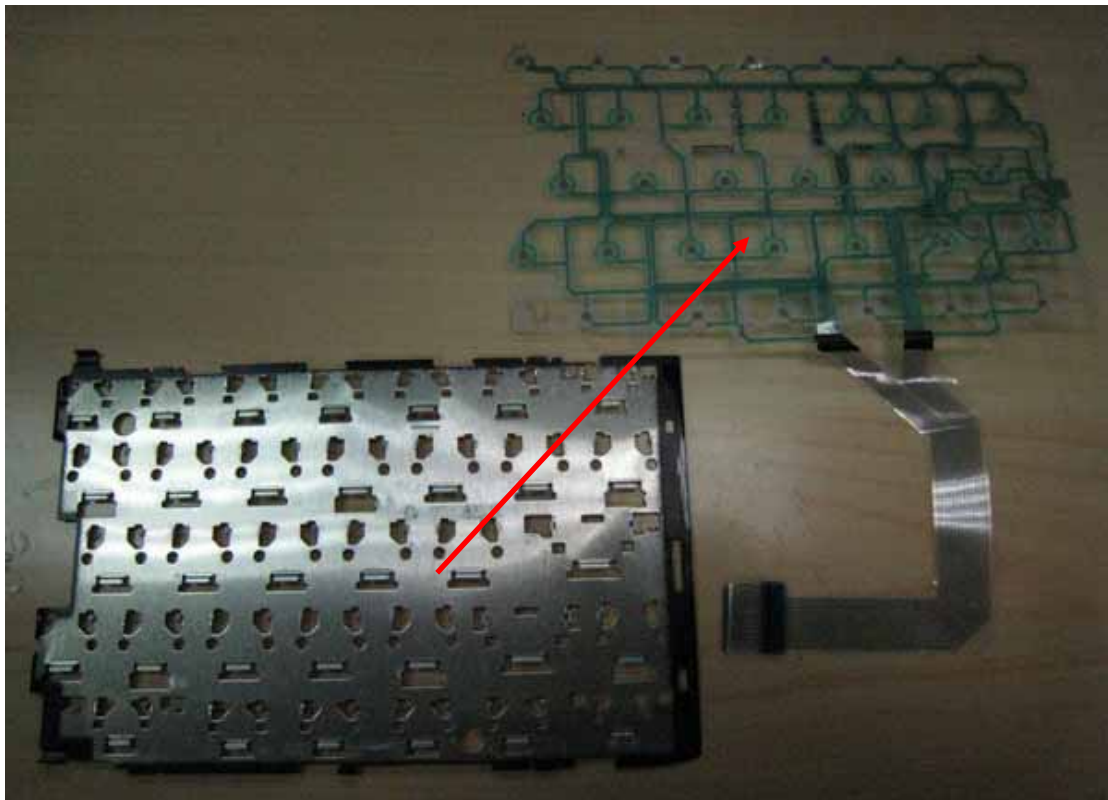

Only authorized recyclers are permitted to use these disassembly instructions. Any attempted disassembly by a user or unauthorized party will void the product warranty and may irreparably damage the product.

**For the other key module, the procedure is the same**




**All parts are disassembled**



**Only authorized recyclers are permitted to use these disassembly instructions. Any attempted disassembly by a user or unauthorized party will void the product warranty and may irreparably damage the product.**



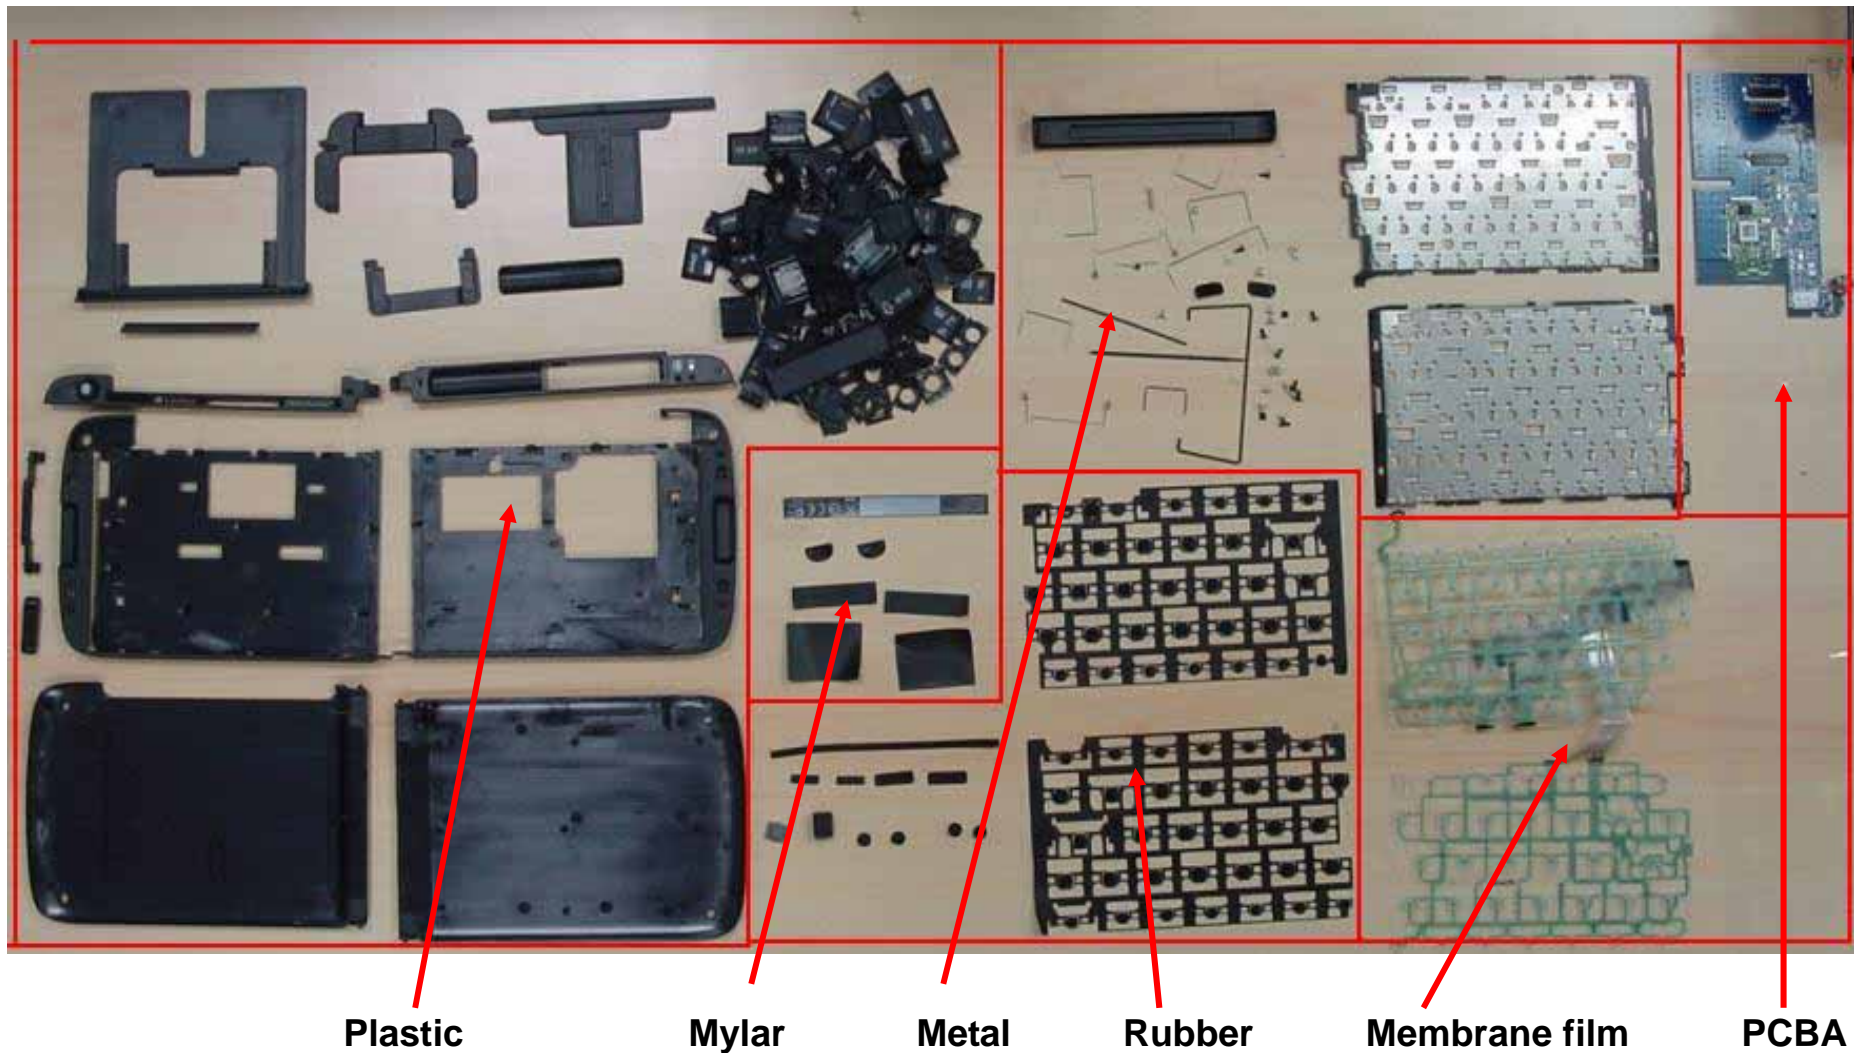

Only authorized recyclers are permitted to use these disassembly instructions. Any attempted disassembly by a user or unauthorized party will void the product warranty and may irreparably damage the product.